



# Toshiba Satellite C55-C5240 RAM Replacement

This guide will explain how to remove the RAM.

Written By: Angela Rodriguez



## INTRODUCTION

This is a guide that will assist you with replacing your RAM in a Toshiba Satellite C55-C5240.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery

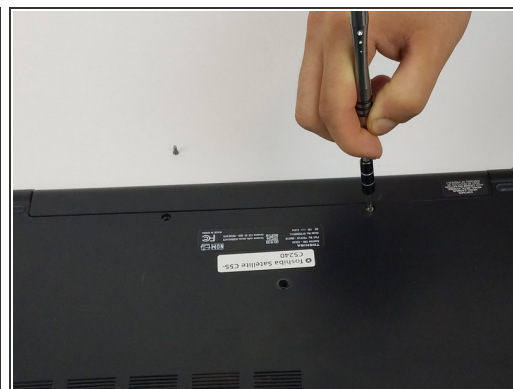

**i** Make sure you turn off the laptop before starting.

- Unscrew the two 6.5mm PH1 Phillips head screws below the battery.


## Step 2



- Pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.




### Step 3 — Back cover

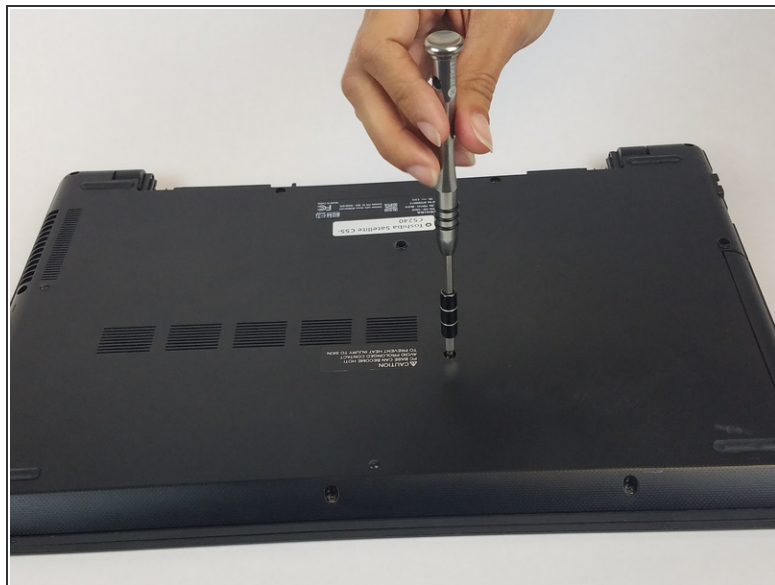



- Unscrew the ten 6.5mm PH1 Phillips head screws that hold down the back cover.

### Step 4

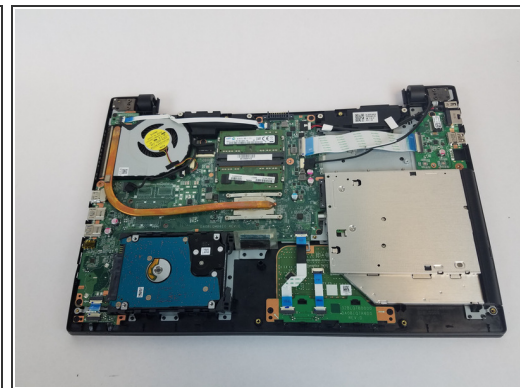


- Using the plastic opening tools, open the back cover and remove it from the laptop.
- i** It is recommended that you start from a corner and run the tool along the edge of the cover.
- !** Be careful not to bend or crack the cover.

## Step 5 — RAM

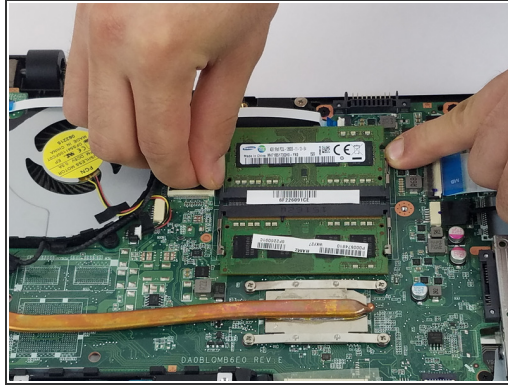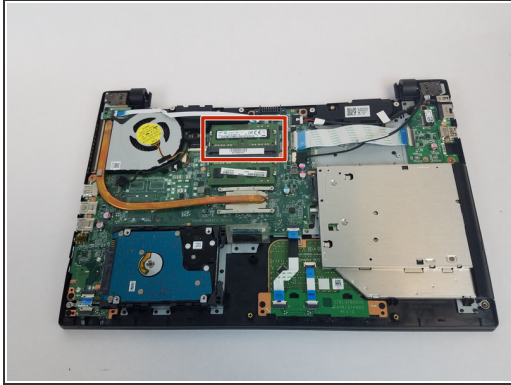

- The RAM is at the upper middle area of the motherboard.
- Push down on the clips on either side of the RAM stick evenly.
- ⓘ It will come loose in an angle once the clips are released.

## Step 6

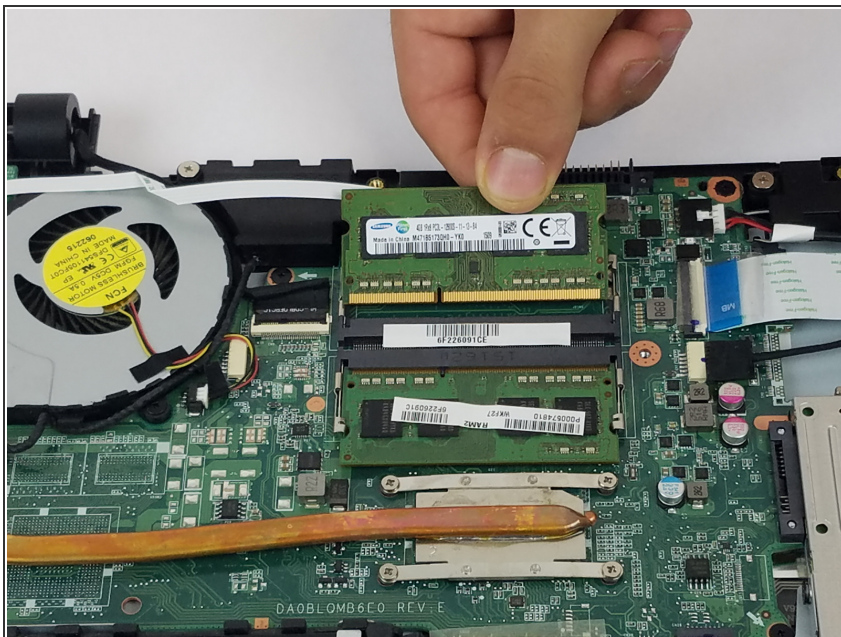

- Simply pull out the RAM stick.
- ⓘ These steps work for both sticks of RAM.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-07 04:36:24 PM.